

NOTE! New model



Picture shows parts,




Drive the air jet into the hole using a rubber mallet.
Note! Remove gasket before. Hold it from underneath and support the part with your arm.
Remove the air jet.



Assemble the air jet. The thinner of the gaskets is placed on the top side.



Picture shows air jet + gasket installed.

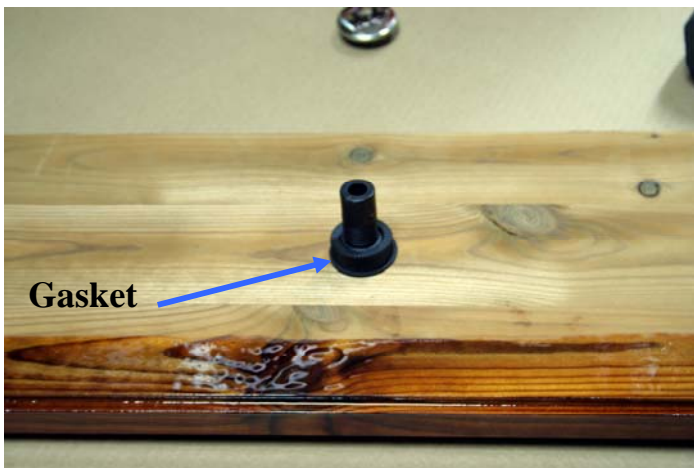

Screw on and tighten underneath. Do not forget to put the thicker gasket in between first!



The finished part.



The airjet should be coated with silicon before the T-connection is attached



Apply silicon on the airjet



Silicon applied



Smear out the silicon



Attach the T-connection



The finished part.